


Video on How to Zero the CereLink Sensor DURING INSERTION

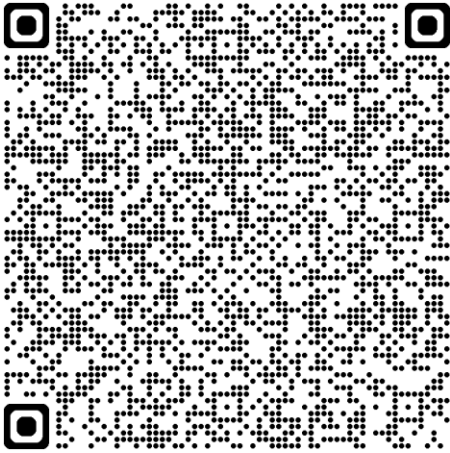

Zeroing the CereLink sensor refers to the process of calibrating the sensor to atmospheric pressure prior to insertion. **This process is only performed once - immediately prior to inserting the sensor into the head.** If this process is repeated AFTER insertion into the patient, the pressure would be reset to 0. From that point, all readings would be falsely low and cannot be corrected without replacing the sensor.

Scan QR or watch [video here](#)